


BILL OF MATERIAL REVISIONS				
ZONE	REV.	DESCRIPTION	DATE	APPROVED


## UB-MT-500NPS ASSEMBLY INSTALLATION GUIDE:

- ASSEMBLE SPEAKER TO U-BRACKET (REFER TO U-BRACKET INSTALLATION GUIDE).
- ATTACH UB-MT-500NPT TO THE TUBE EXTENSION FROM ABOVE. MAKE SURE TO LOOSEN THE SET SCREW SO THAT THE TUBE EXTENSION CAN EASILY SCREWED INTO THE COUPLING OF THE TUBE ADAPTER MOUNT. DO NOT TIGHTEN THE SET SCREW YET UNTIL FINAL SPEAKER DIRECTION IS SET (FIGURE 1).
- ATTACH THE U-BRACKET WITH SPEAKER (OPTIONAL TO ATTACH SPEAKER TO U-BRACKET) TO THE UB-MT-500NPT USING THE PROVIDED SCREWS, NUTS AND FLAT WASHERS. TIGHTEN PERMANENTLY. MAKE SURE TO USE THE APPROPRIATE BOLTS TO U-BRACKET AND THE TUBE ADAPTER MOUNT (FIGURE 1). TIGHTEN BOLTS PERMANENTLY.

NOTE:  
FOR THE U-BRACKETS THAT HAVE THE SMALLER HOLES ON THE BASE, USE THE PROVIDED 5/16 BOLTS, FLAT WASHERS AND NUTS.

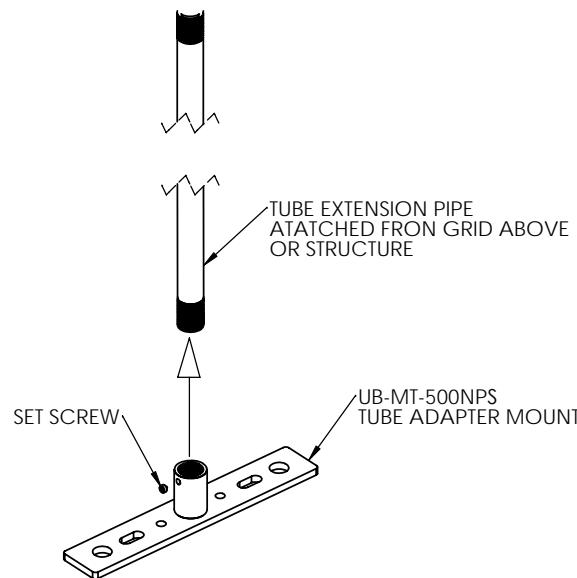

- TIGHTEN SET SCREW ON THE COUPLING TO SECURE THE PIPE FROM ROTATING (FIGURE 1 AND 2)

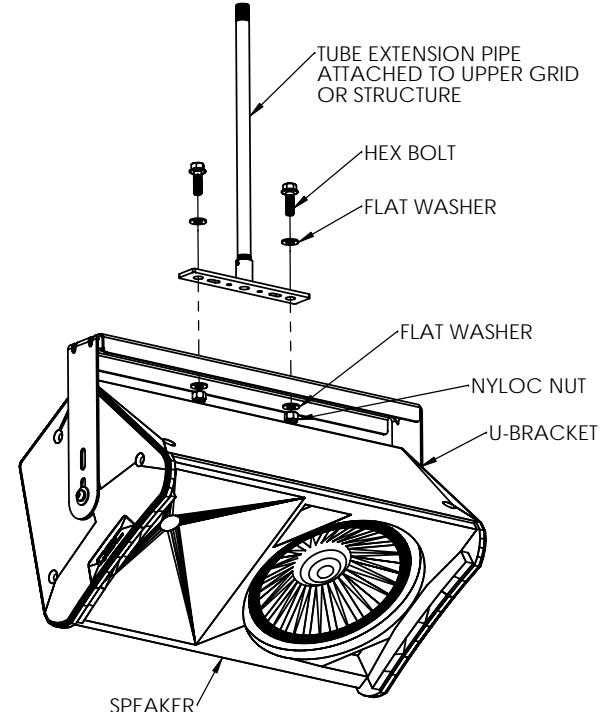

PROPRIETARY AND CONFIDENTIAL THIS DRAWING IS THE PROPERTY OF ADAPTIVE TECHNOLOGIES GROUP EMBODIES PROPRIETARY INFORMATION ORIGINATED BY ADAPTIVE TECHNOLOGIES GROUP. ALL DESIGN, MANUFACTURE, REPRODUCTION, USE AND SALE RIGHTS REGARDING THE SAME ARE EXPRESSLY RESERVED. THE DRAWING MAY NOT BE REPRODUCED OR INFORMATION HEREIN TRANSMITTED IN ANY WAY WITHOUT WRITTEN APPROVAL FROM ADAPTIVE TECHNOLOGIES GROUP. ALL PATENT RIGHTS HERETO ARE EXPRESSLY RESERVED BY ADAPTIVE TECHNOLOGIES GROUP. SIGNAL HILL, CALIFORNIA	UNLESS OTHERWISE SPECIFIED:				ADAPTIVE TECHNOLOGIES GROUP
	DRAWN	TBA	08/07/13		1635 E. Burnett Street Signal Hill, CA 90755 Tel: 562-424-1100 Fax: 562-424-3520
	CHECKED				
	ENG APPR.				TITLE: UB-MT-500NPS ASSEMBLY INSTRUCTION
	MFG APPR.				
	Q.A.				NEXT ASSY:
	COMMENTS:				USED ON:
	FINISH				SIZE: DWG. NO. B REV: 00
	DO NOT SCALE DRAWING				SCALE: 1:12 WEIGHT: SHEET 1 OF 1